



- NOTE 1 Select Output B function. Jump 1-2 for differential. Jump 2-3 for low gain channel.
- NOTE 2 Gain Select for 16/24 bit systems Jump 1-2 for 16 bits. Jump 2-3 for 24 bits.
- NOTE 3 Loop Test Signal Injection Point ---- Jump 1-2 for normal operation.
- NOTE 4 Clock Oscillator optional for frequency stability over temperature. Omit C7 When Oscillator is installed.
- NOTE 5 Install either R32 or C12 for injecting a calibration signal.
- NOTE 6 Connections for sensor circuit board Rev. 1.13 only
- NOTE 7 Do not install components D8, D9, R22, RT1 and RT2

	FBV	
	FORCE BALANCE VERTICAL	
FBV 1.13	23-July-2010 B. Nordgren	For PCB Rev.1.13 6/22/09